


# Tornado Fitting Instructions

**PLEASE NOTE:** If the bar end mounting system is too wide for your bars, email us at [help@breezblockers.com](mailto:help@breezblockers.com) to arrange for replacement with a narrower design.

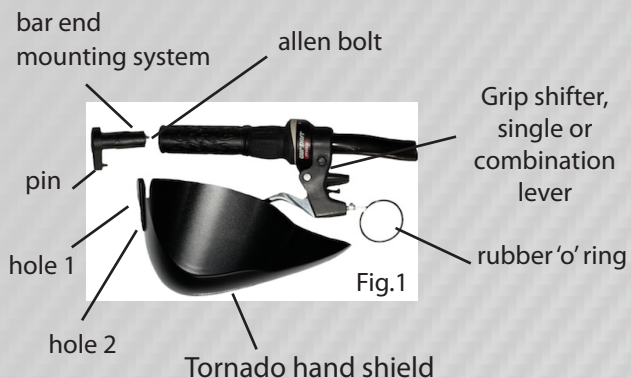


1. Remove any bar end plug or use a sharp craft knife to cut the end off your existing grip as close to the end of the bar as possible. A useful tip is to gently hit the end of the grip with a hammer. This will create a circle to facilitate removal.
2. Place the bar end mounting system through hole 1 of the shield (Fig. 2).
3. Ensure pin enters hole 2 to prevent rotation of the shield (Fig. 2).
4. Semi-tighten the allen bolt to secure the shield on to the handlebars.

5. With the shield in position, place the rubber 'o' ring over mounting lug 1 (Fig. 3).
6. Wrap the 'o' ring around the brake lever or the handlebars and then secure over mounting lug 2 (Fig. 4 & Fig. 6).
7. Secure the shield in the desired position by tightening the allen bolt whilst applying internal pressure (Figs. 5 & 7).
8. If necessary you may need to reposition your brake or gear levers. They will either be horizontal or angled downwards (Figs. 5 & 7).
9. Repeat the process for the second shield.



mounting lugs 1 and 2

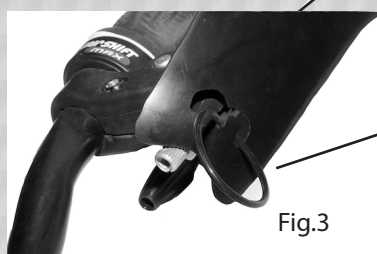

rubber 'o' ring



Fig.4



Tornado shield secured with brake horizontal



Tornado shield secured with brake angled down

